



Installation Instructions

Battery Pace Clock – Second Hand Replacement Installation No. 200-307, 200-308, 200-402 & 200-403

Please read these instruction to properly replace hands from Competitor 31” or 15” Battery Pace Clocks

Instructions ---

1. Lay clock flat with the lens side facing up. Carefully remove the lens from the clock. Set Lens aside.
2. Locate the existing Second Hand Assembly (Red). Remove current hand by pulling lightly upward, away from the face. The brass fitting along with the hand will release from the shaft. This fitting is held by friction.
3. Mount the new Second Hand Assembly onto the needle shaft located at the center of the exposed motor shaft. Slide the hub over the needle using light pressure. The hub should not be forced all the way down or the hand may not turn properly. **See Figure 1**

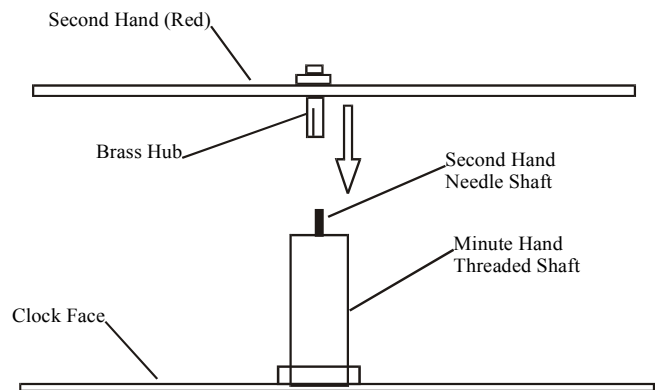


Figure 1

Manufactured by:
Competitor Swim Products
a Division of Richey Industries, Inc.
910 Lake Road
Medina, Ohio 44256

Tel: 330-725-4997

Fax: 330-722-3288